

GreCon

Brief Instructions: Switching off



Note

Authorisation level 2 is the minimum level required for switching off the various zones.


- 1 Press the button "Settings".



- 2 In the menu "Switching off / Function test", select the menu option that is to be switched off:
 - "Switching off zone"
 - "Switching off detector group"
 - "Switching off extinguishment group"
 - "Switching off line module"
 - "Switching off components"



- 3 Select the sub-zone to be switched off.

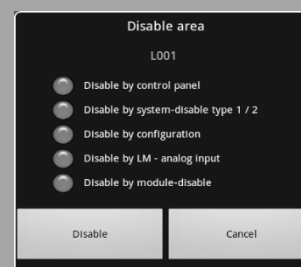

- 4 In the display, click the button "Switch off".